

DMX 16 CHANNEL LIST	
CHANNEL	FUNCTION
1	Pan
2	Tilt 1
3	Tilt 2
4	Tilt 3
5	Tilt 4
6	Dimmer Total
7	Control Strobe / Reset !
8	LED Macro - Patterns
9	Move Macro - Auto
10	LED Macro Speed
11	LED - Red
12	LED - Green
13	LED - Blue
14	LED - White
15	Lasers - Red / Green
16	Strobe White LED

## DMX 64 CHANNEL LIST

CHANNEL	FUNCTION
1	Pan
2	Pan Rotation
3	Tilt 1
4	Tilt 2
5	Tilt 3
6	Tilt 4
7	Speed Move
8	Dimmer
9	Shutter
10	Macro LED
11	Macro Move
12	Speed LED Macro
13	LED 1 - Red
14	LED 1 - Green
15	LED 1 - Blue
16	LED 1 - White
17	LED 2 - Red
18	LED 2 - Green
19	LED 2 - Blue
20	LED 2 - White
21	LED 3 - Red
22	LED 3 - Green
23	LED 3 - Blue
24	LED 3 - White
25	LED 4 - Red
26	LED 4 - Green
27	LED 4 - Blue
28	LED 4 - White
29	LED 5 - Red
30	LED 5 - Green
31	LED 5 - Blue
32	LED 5 - White

CHANNEL	FUNCTION
33	LED 6 - Red
34	LED 6 - Green
35	LED 6 - Blue
36	LED 6 - White
37	LED 7 - Red
38	LED 7 - Green
39	LED 7 - Blue
40	LED 7 - White
41	LED 8 - Red
42	LED 8 - Green
43	LED 8 - Blue
44	LED 8 - White
45	LED 9 - Red
46	LED 9 - Green
47	LED 9 - Blue
48	LED 9 - White
49	LED 10 - Red
50	LED 10 - Green
51	LED 10 - Blue
52	LED 10 - White
53	LED 11 - Red
54	LED 11 - Green
55	LED 11 - Blue
56	LED 11 - White
57	LED 12 - Red
58	LED 12 - Green
59	LED 12 - Blue
60	LED 12 - White
61	Laser Red
62	Laser Green
63	Strobe White LED
64	Reset