

1 5 floor DMX Channel menu

AH50 DH51

9-channel mode (A001 status)

channel	function	explain
CH1	Total dimming	Total dimming, from dark to bright
CH2	R dimming	R dimming, from dark to bright
CH3	G dimming	G dimming, from dark to bright
CH4	B dimming	B dimming, from dark to bright
CH5	W dimming	W dimming, from dark to bright
CH6	Y dimming	Y dimming, from dark to bright
CH7	Total stroboscopic	Global stroboscopic, from slow to fast
CH8	Function selection	0: Dimming mode; 1—62: Color selection (selected by ch9); 63—124: Jump change; 125—186: Gradual change; 187—249: Pulse change; 250-255: Voice control (ch9 selects voice control 1 and 2)
CH9	Function speed	Function speed, from slow to fast (color selection for color output, voice control strobe and jump for voice control)

9-channel mode (d001)

channel	function	explain
CH1	Total dimming	Total dimming, from dark to bright
CH2	Total stroboscopic	Global stroboscopic, from slow to fast
CH3	Function selection	0: Dimming mode; 1—62: Color selection (selected by ch4); 63—124: Jump change; 125—186: Gradual change; 187—249: Pulse change; 250-255: Voice control (ch4 selects voice control 1 and 2)
CH4	Function speed	Function speed, from slow to fast (color selection for color output, voice control strobe and jump for voice control)
CH5	R dimming	R dimming, from dark to bright
CH6	G dimming	G dimming, from dark to bright
CH7	B dimming	B dimming, from dark to bright
CH8	W dimming	W dimming, from dark to bright
CH9	Y dimming	Y dimming, from dark to bright

2 Nixie tube display menu description

NUM	content	Numerical range	Function and description
1	A001	001- 512	DMX512 address code setting - 9 channel mode
2	d001	001- 512	DMX512 address code setting - 9 channel mode
3	r255	000 - 255	Red dimming, from dark to bright.
4	G255	000 - 255	Green dimming, from dark to bright.
5	b255	000 - 255	Blue dimming, from dark to bright.
6	u255	000 - 255	White dimming, from dark to bright.
7	y255	000 - 255	Yellow dimming, from dark to bright.
8	FH99	01 - 99	Stroboscopic, speed from slow to fast.
9	CL01	01 - 31	Manual color selection mode.
10	CC99	01 - 99	Jump from slow to fast. .
11	DE99	01 - 99	Gradient, from slow to fast.
12	CP99	01 - 99	Pulse changes from slow to fast.
13	SU01	01 - 02	Mode: 1 is stroboscopic jump, 2 is jump

3 Master slave description

In D001 or A001 state, the slave signal is automatically received without additional setting.