



# 200W Waterproof COB Blinder W&WW User Manual

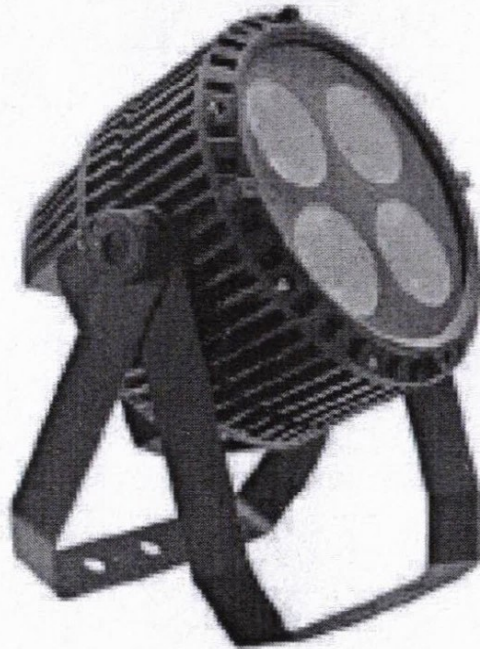

## 1. Display panel:

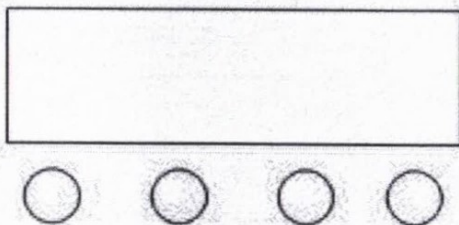

- A. Menu Keys
- B. Up keys
- C. Down keys
- D. ENTER

Operation instructions: Press function key A to cycle through 13 different functional effects, the first two digits of the digital tube represent the current function (refer to the function table). The last two digits represent the address code or speed parameter where the function is located. Press B or C to modify its parameter value. Press D to confirm.

## 2. Lamp bead power value

(long press the A key to enter the setting. For reference only, the values are not uniform. After all functions are selected, press the D key to confirm)

No.	Display	Function Description
1	R102	White 1 current, (020-255) B and C keys to modify the current
2	G104	Warm color 1 current, (020-255) B and C keys to modify the current
2	b130	White 2 current, (020-255) B and C keys to modify the current
3	U102	Warm color 2 current, (020-255) B and C keys to modify the current

### 3. LED display window function comparison table,

(Press D key to confirm after all functions are selected)

No.	Display	Function Description
1	A001	8-channel mode, (001-512) B, C key plus or minus address code value
2	d001	4-channel mode, (001-512) B, C key plus or minus address code value
3	r255	White 1 toning, (001-255) B, C key plus or minus address code value
4	G255	Warm color 1 toning, (001-255) B, C key plus or minus address code value
5	B255	White 2 toning, (001-255) B, C key plus or minus address code value
6	U255	Warm color 2 toning, (001-255) B, C key plus or minus address code value
7	FH00	Strobe, (01-99) B and C keys to modify the strobe speed
8	CL00	Color selection, (01-08) B and C keys to modify the color
9	CC00	Jump, (00-99) B, C modify jump speed
10	dE01	Gradient, (00-99) B, C modify the gradient speed
11	CP 00	Pulse change, (00-99) B and C keys to modify the pulse change
12	SU00	Sound control mode, (01-09) B and C keys to modify the voice control sensitivity

### 4. DMX512 8 channels

CH	Value	A001 Function description
CH1	0--255	Total dimming from dark to bright
CH2	0	white 1 off
	1---255	White 1 dimming, from dark to bright
CH3	0	yellow 1 off
	1---255	Warm color 1 dimming, from dark to bright
CH4	0	white 2 off
	1---255	White 2 dimming, from dark to bright
CH5	0	yellow 2 off
	1---255	Warm color 2 dimming, from dark to bright
CH6	0---255	Strobe from slow to fast
CH7	0---50	Enable DMX
	51---100	Program color selection
	101---150	program jump
	151---200	procedural gradient
	201---250	program pulse
	251---255	Voice activated
CH8	0---255	Speed (color selection, voice control mode)

### 5. DMX512 4 channels

CH	Value	d001 Function description
CH1	0	white 1 off
	1---255	Turn on from dark to light
CH2	0	Warm 1 off
	1---255	Turn on from dark to light
CH3	0	white 2 off
	1---255	Turn on from dark to light
CH4	0	Warm Colors 2 Off
	1---255	Turn on from dark to light